


INSTALLATION MANUAL




REMOVE HDD BRACKET



1. Remove bottom screw

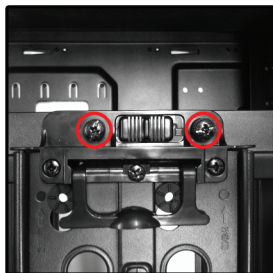


2. Remove top thumb screws
3. Slide secure lock to the right
4. Lift

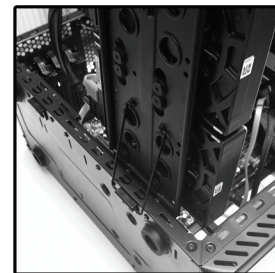


Tip:
Use bracket holder while working in the case.

ASSEMBLE POWER SUPPLY

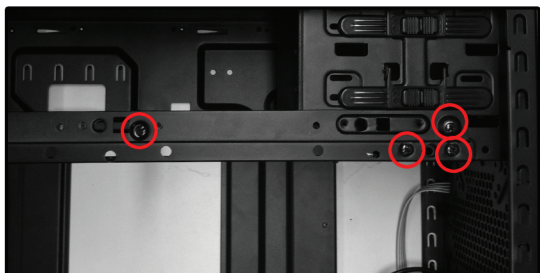


1. Remove screws

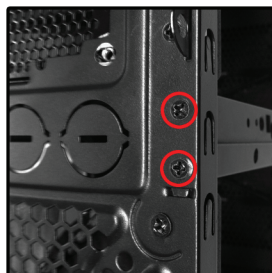


2. Remove screws
3. Remove case bracket




4. Remove screw
5. Remove PSU support bracket

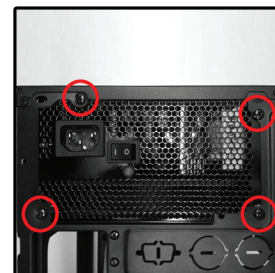

6. Gently press the power supply into place (the fan should be facing down)
7. Secure with screws

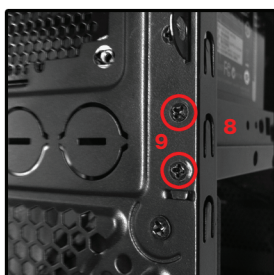

8. Put case bracket back into place
9. Secure with screws

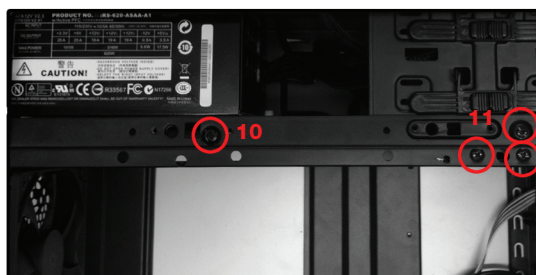


10. Put PSU support bracket into place and secure with screws
11. Secure case bracket with screws


ASSEMBLE ODD (OPTICAL DRIVE)



1. Remove front panel by putting your fingers between front panel and case and pull gently

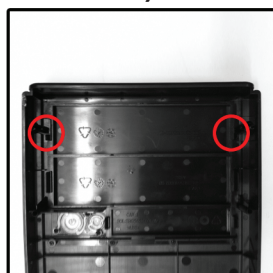

2. Gently bend clips to remove 5,25" cover where you want to place the ODD

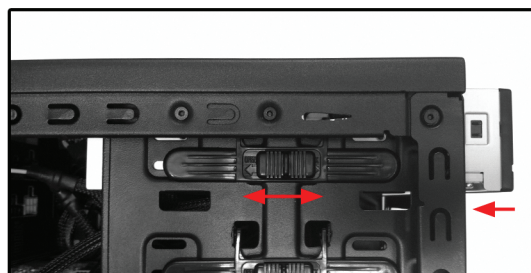


3. Slide secure lock to the right and lift
4. Slide in ODD
5. Slide lock to the left to lock in place
(Optional: remove secure lock and screw ODD into place)




6. Put front panel back into place


ASSEMBLE HDD

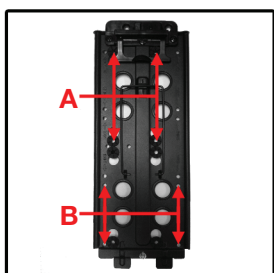

A. For 3,5" HDD (Two per bracket)
B. For 2,5" HDD (Three per bracket)

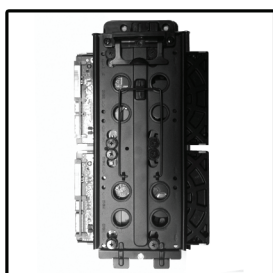

On HDD bracket:
1. Screw your HDD into place
2. Assemble bracket back into case

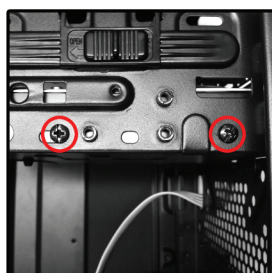

In external 3,5":
1. Screw your HDD into place (both sides if needed)



Bottom of case:
1. Screw your HDD into place



ECCO250
ACOUSTIC PANEL